

# #248/249\* POP Hockey/Soccer Display


## ASSEMBLY INSTRUCTIONS

### Parts:



Banner (1), Uprights (2), Upper and Lower crossbars (1 each), Straight front to back connectors (2) and Net (1)

Instruction Sheet (1)

\* 248 does not include hanging banner.

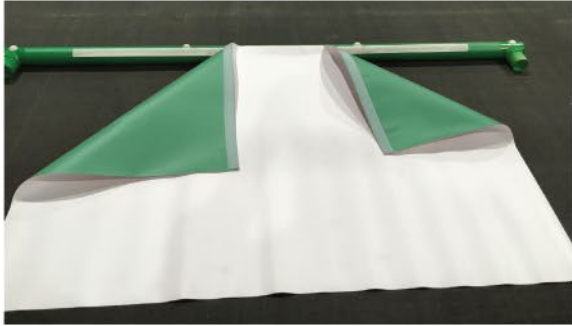

Start first by attaching banner velcro to velcro on upper crossbar. Assemble bottom section by connecting straight front to back connectors to lower crossbar - white buttons facing up. Attach left and right uprights with print facing front of display and buttons facing inside and back. Insert upper crossbar into uprights with images facing front.

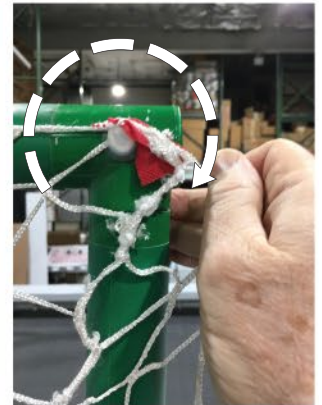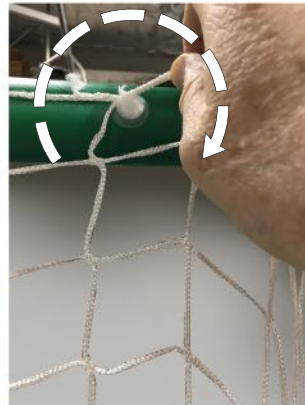

Upper left and right corners of net are indicated by red tabs. Loop left upper corner clockwise around white button. Do same for remaining buttons going from left to right - then again moving down uprights, again along straight front to back connectors, and finally across lower cross bar to complete assembly.

