

Assembly Instructions 340-L, 340-XL

Parts:

1/4" X 1 1/4" screws (4 pcs)

1/4" X 2 1/4" screw (1 pc)

1/4" Lock Nuts (5 pcs)

Adjusting knob (1 piece)

Ferrule (2 pcs)

Hoop/Net (1 pc)

Backboard (1 pc) packed separately


Cross brace, lower post, upper post (1 pc ea)

Counter Weight (1 pc) best filled with "play sand"

Tools required, not supplied:

7/16" combination open end/box wrench (2 pcs)

Large funnel for sand

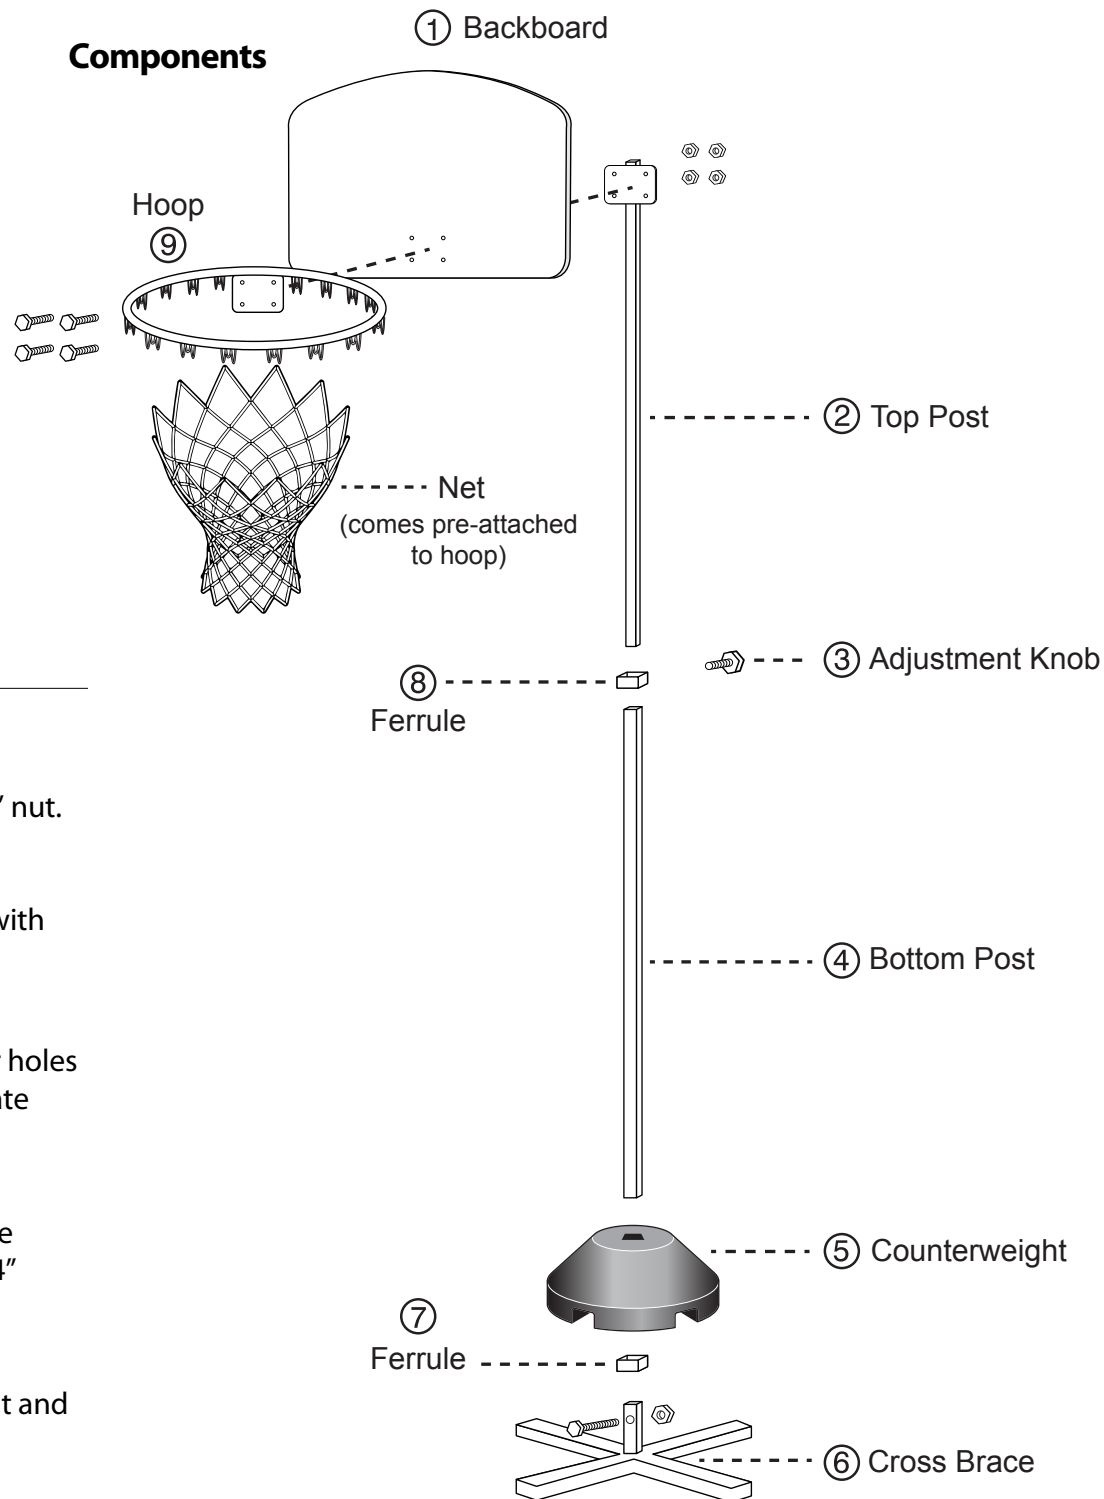

1 Insert bottom post
(4) into cross brace (6) and bolt 1/4" X 2 1/4" screw, 1/4" nut.

2 Place counterweight
(5) on cross brace (6). NOTE: Fill the counterweight (5) with sand for stability.

3 Place the top post
(2) in the rear notch of the backboard, aligning the four holes in the backboard with the four holes in the top post plate using the 1/4" X 2 1/4" bolts.

4 Place the hoop
(9) in the front notch of the backboard (1) and screw the backboard and top post together using the 1/4" X 2 1/4" screws and 1/4" nuts.

5 Insert the previously assembled top post
(2) into the bottom post (4), adjust to the desired height and tighten with adjustment knob (3).

You're done!