


Peel off adhesive backing of the pre-applied velcro on the inside of the signage.

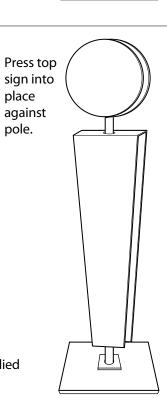

place

pole.

against

