



1

Connect base parts 1, 2, 3 and 4.

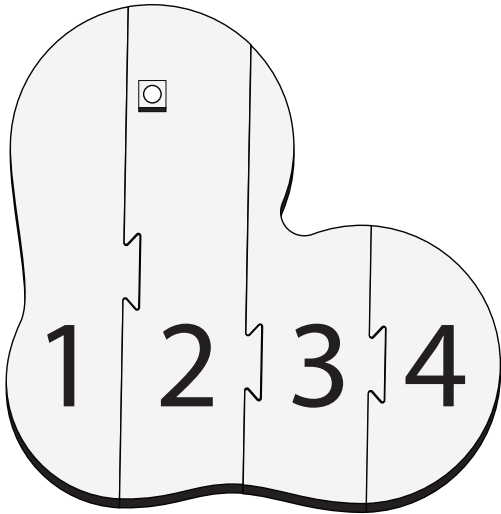


2

Lay pre-cut printed part over assembled base, print side face up.

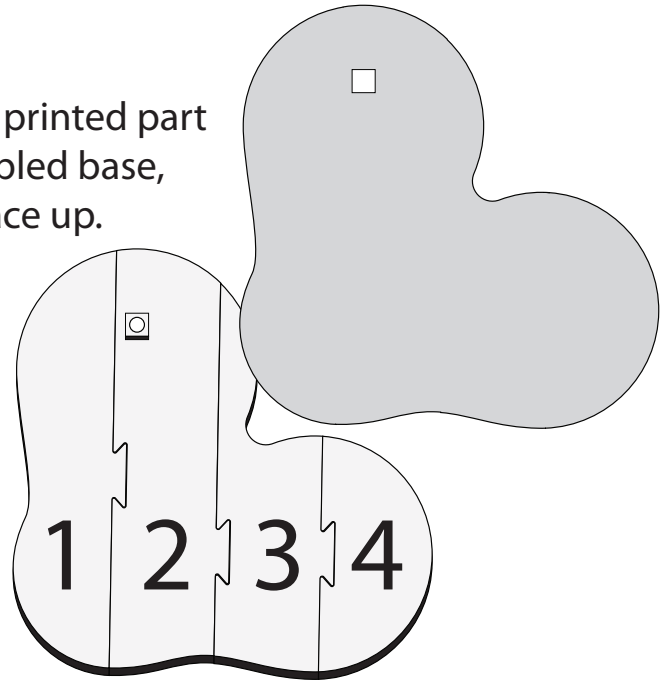

3

Insert pipes into hole on base. Bottom pipe without inner sleeve first - then middle, and lastly top.

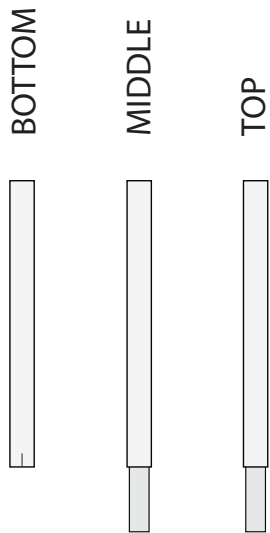

4

Top off your display with the pre-assembled flag by sliding open end down onto top pipe.

